


# Linear Highbay LED Light



LED modules rotate up to 135°



Date: ..... Location: .....

Product: ..... Project: .....

Quantity: ..... Catalog# .....

## FEATURES

- Built in Sensor receptacle port, Easy plug and play with Sensor
- Lightweight and easy access wiring
- Corrosion and rust proof
- 50,000 hours lifetime

## SUITABLE APPLICATIONS

- Warehouse Lighting
- Base room lighting
- Shopping mall lighting
- Facilities lighting

### CONSTRUCTION:

Heavy die-cast aluminum alloy housing with white powder-coated finish. Frosted PC optics lens.

### ELECTRICAL:

Available as 277V-480 input. -30°C to 50°C.

### OPTICAL SYSTEM:

High brightness Lumileds chips. 90° beam angle.

### INSTALLATION & MOUNTING:

Suspended/Ceiling Mounting for easy installation

### WARRANTY:


5-year limited warranty. Actual performance may differ as a result of end-user environment and application.

### PERFORMANCE

Model NO	Motion Sensor Detection Distance	Wattage	Voltage/Current Input		Light Efficiency	Kelvin Options
			277V	480V		
AST-PHB08B-220WBMP3H1	40FT to 50FT	220W	0.79A	0.45A	140LM/W	5000K


# V6 Linear Highbay LED Light

## OPTIONAL ACCESSORIES

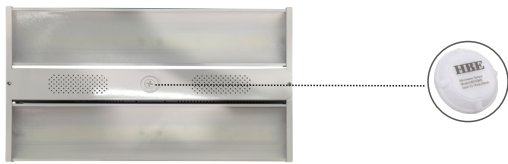

Turn off the cup and insert the sensor

## DIMENSION

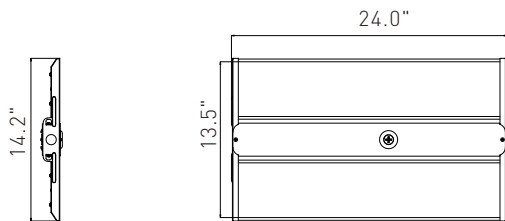


## Electric Characteristic

Specification/Model	AST-PHB08B-220WBMP3H1
LED Driver	FD-240V-050B
Input power	220W
Lumens output	30800LM
Efficiency	140LM/W
CRI	>80
Color Temperature	5000K
Input voltage	277-480V/AC
Light distribution type	90D
Working temperature	-30+50°C
Junction temperature	<75°C
lamps efficiency	≥90%
Certificate	UL CUL DLC
Equivalent	500-700W MH/HPS

## DISTRIBUTION DIAGRAM

AST-PHB08B-220WBMP3H1

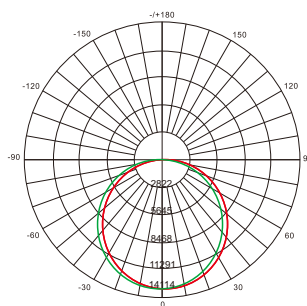

AVERAGE BEAM ANGLE(50%): 90°

Lumens:30800LM  
Test Number:220W  
Test Number:5000K

UNIT:CD  
- C0/180,113.7  
- C30/210,100.1  
- C60/240,108.6  
- C90/270,130.9

# V6 Linear Highbay LED Light

## A. Hanging Installation: (Chain/Cable)

- Step1. Hook up the chain; (Figure 1)
- Step2. Connect the chain with fixture; (Figure 1)
- step3. Fix the chain on the rail, adjust the chain length as per need; (Figure 1)
- Step4. After fixed , choose suitable wiring knock out, connect the wires according to local standard and code.

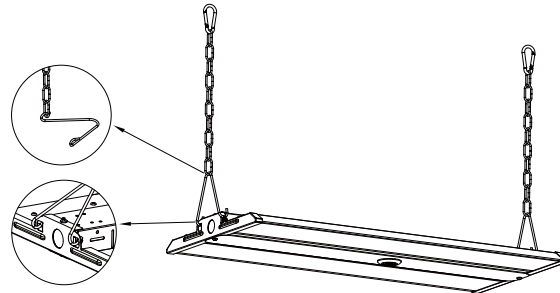


Figure 1

## B. 3/4" NPT Installation:

- Step1. Mount the bracket on 3/4" NPT, (Figure 2)
- Step2. Lock fixture on the bracket; (Figure 3)
- Step3. Connect the wires according to local standard and code.
- Step4 Lock side brackets with screw driver. (Figure 4)



Figure 2

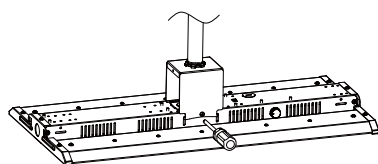


Figure 3

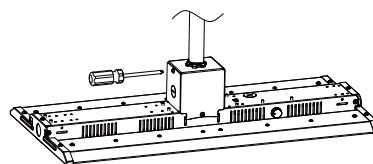


Figure 4

## C. Surface Mounting: (If this bracket is used for the fixture, backup driversolution cannot be chosen)

- Step1. Mount the bracket on the rail or ceiling (Figure 5);
- Step2. Assemble the lamp on the bracket and fix it with screws (Figure 6);
- Step3. After mounting, choose suitable wiring knock out and connect the wires according to local standard and code.

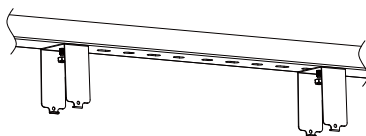


Figure 5

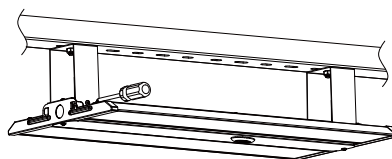


Figure 6

# V6 Linear Highbay LED Light

## Extra Accessory Option Installation: 1:Wire Guard, 2:Motion Sensor / PIR Sensor,3: Backup driver

1.Wire Guard: [Purchase the correct size wire guard from manufacturer]

Step1.Unscrew the two screws on the front of the lamp;[Figure 7]

Step2.Place the wire guard on the lamp and fix it with screws.[Figure 8]

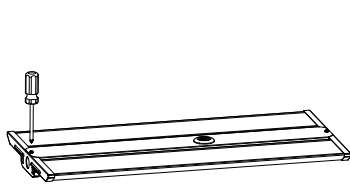


Figure 7

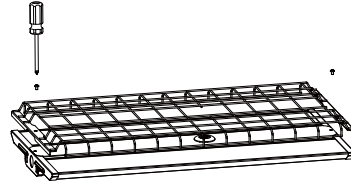


Figure 8

## 2-1.Motion Sensor/PIR Sensor: [Both sensor are with same installation]

Step1.Open the face cover with screw driver;[Figure 9]

Step2.Knock out the side cover, mount the sensor on the side, do wiring accofing to instruction on sensor; (Figure 10)

Step3.Put face cover back with screw driver. [Figure 11]

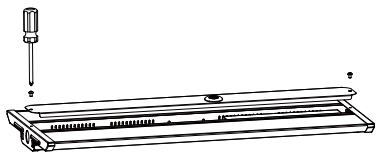


Figure 9




Figure 10


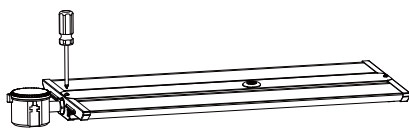


Figure 11

### Wiring Instruction

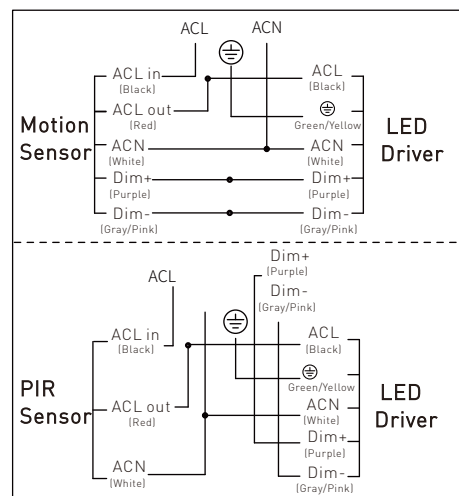

## 2-2.DC Motion Sensor l PIR Sensor [Both sensors are with the same installation method]

Step1.Use a screwdriver to remove the 1/2 plug from the sensor; [Figure 12]

Step2.Twist-lock the DC sensor to the base to make it work properly, use a remote control to adjust the working mode as per demand.[Figure 13]

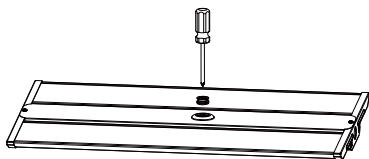


Figure 12

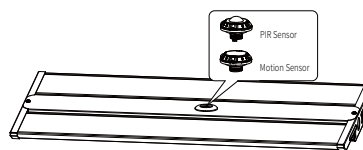


Figure 13